## **Appliqué**

## **House Walls**

Machine Settings:







Foot: Appliqué Foot (optional foot) or

Satin Foot F


Foot Pressure: 1 - 2

Stitch Width: 3.5

Stitch Length: 2.5


Thread Tension: 2.2

Needle Thread: All-Purpose Thread Bobbin Thread: All-Purpose Thread



Tip:


- Use iron-on tape or spray glue to keep the appliqué pieces from unraveling.
- 2. Select the Appliqué stitch. Place the fabric under the foot with the right needle position falling just off the edge of the appliqué pieces.
- 3. Lower the foot and start sewing.

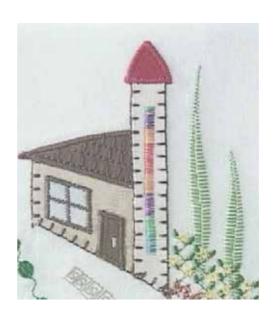



## **Tower Roof**

Machine Settings:

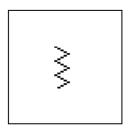



Stitch Width: 2.0 - 3.0
Stitch Length: 0.2 - 0.3
Thread Tension: 2.0 - 2.2

Select the zigzag stitch.

2. Set stitch width between 2.0 - 3.0, stitch length between 2.0 - 3.0, and thread tension between 2.0 - 2.2.

3. Start sewing.

## Tips:

When sewing corners or the like where you need to change the direction of the fabric, stop with the needle in the fabric, raise the pressure foot and pivot the fabric on the needle. Make sure that the needle is in the correct position at the edge of the fabric before pivoting.